


## To lock in to Inmarsat, use any of these CHANNEL NUMBERS 38, 48, 49, 88

Numbers inside spot beams are the location codes, used only to identify positions of the places with identical channels.

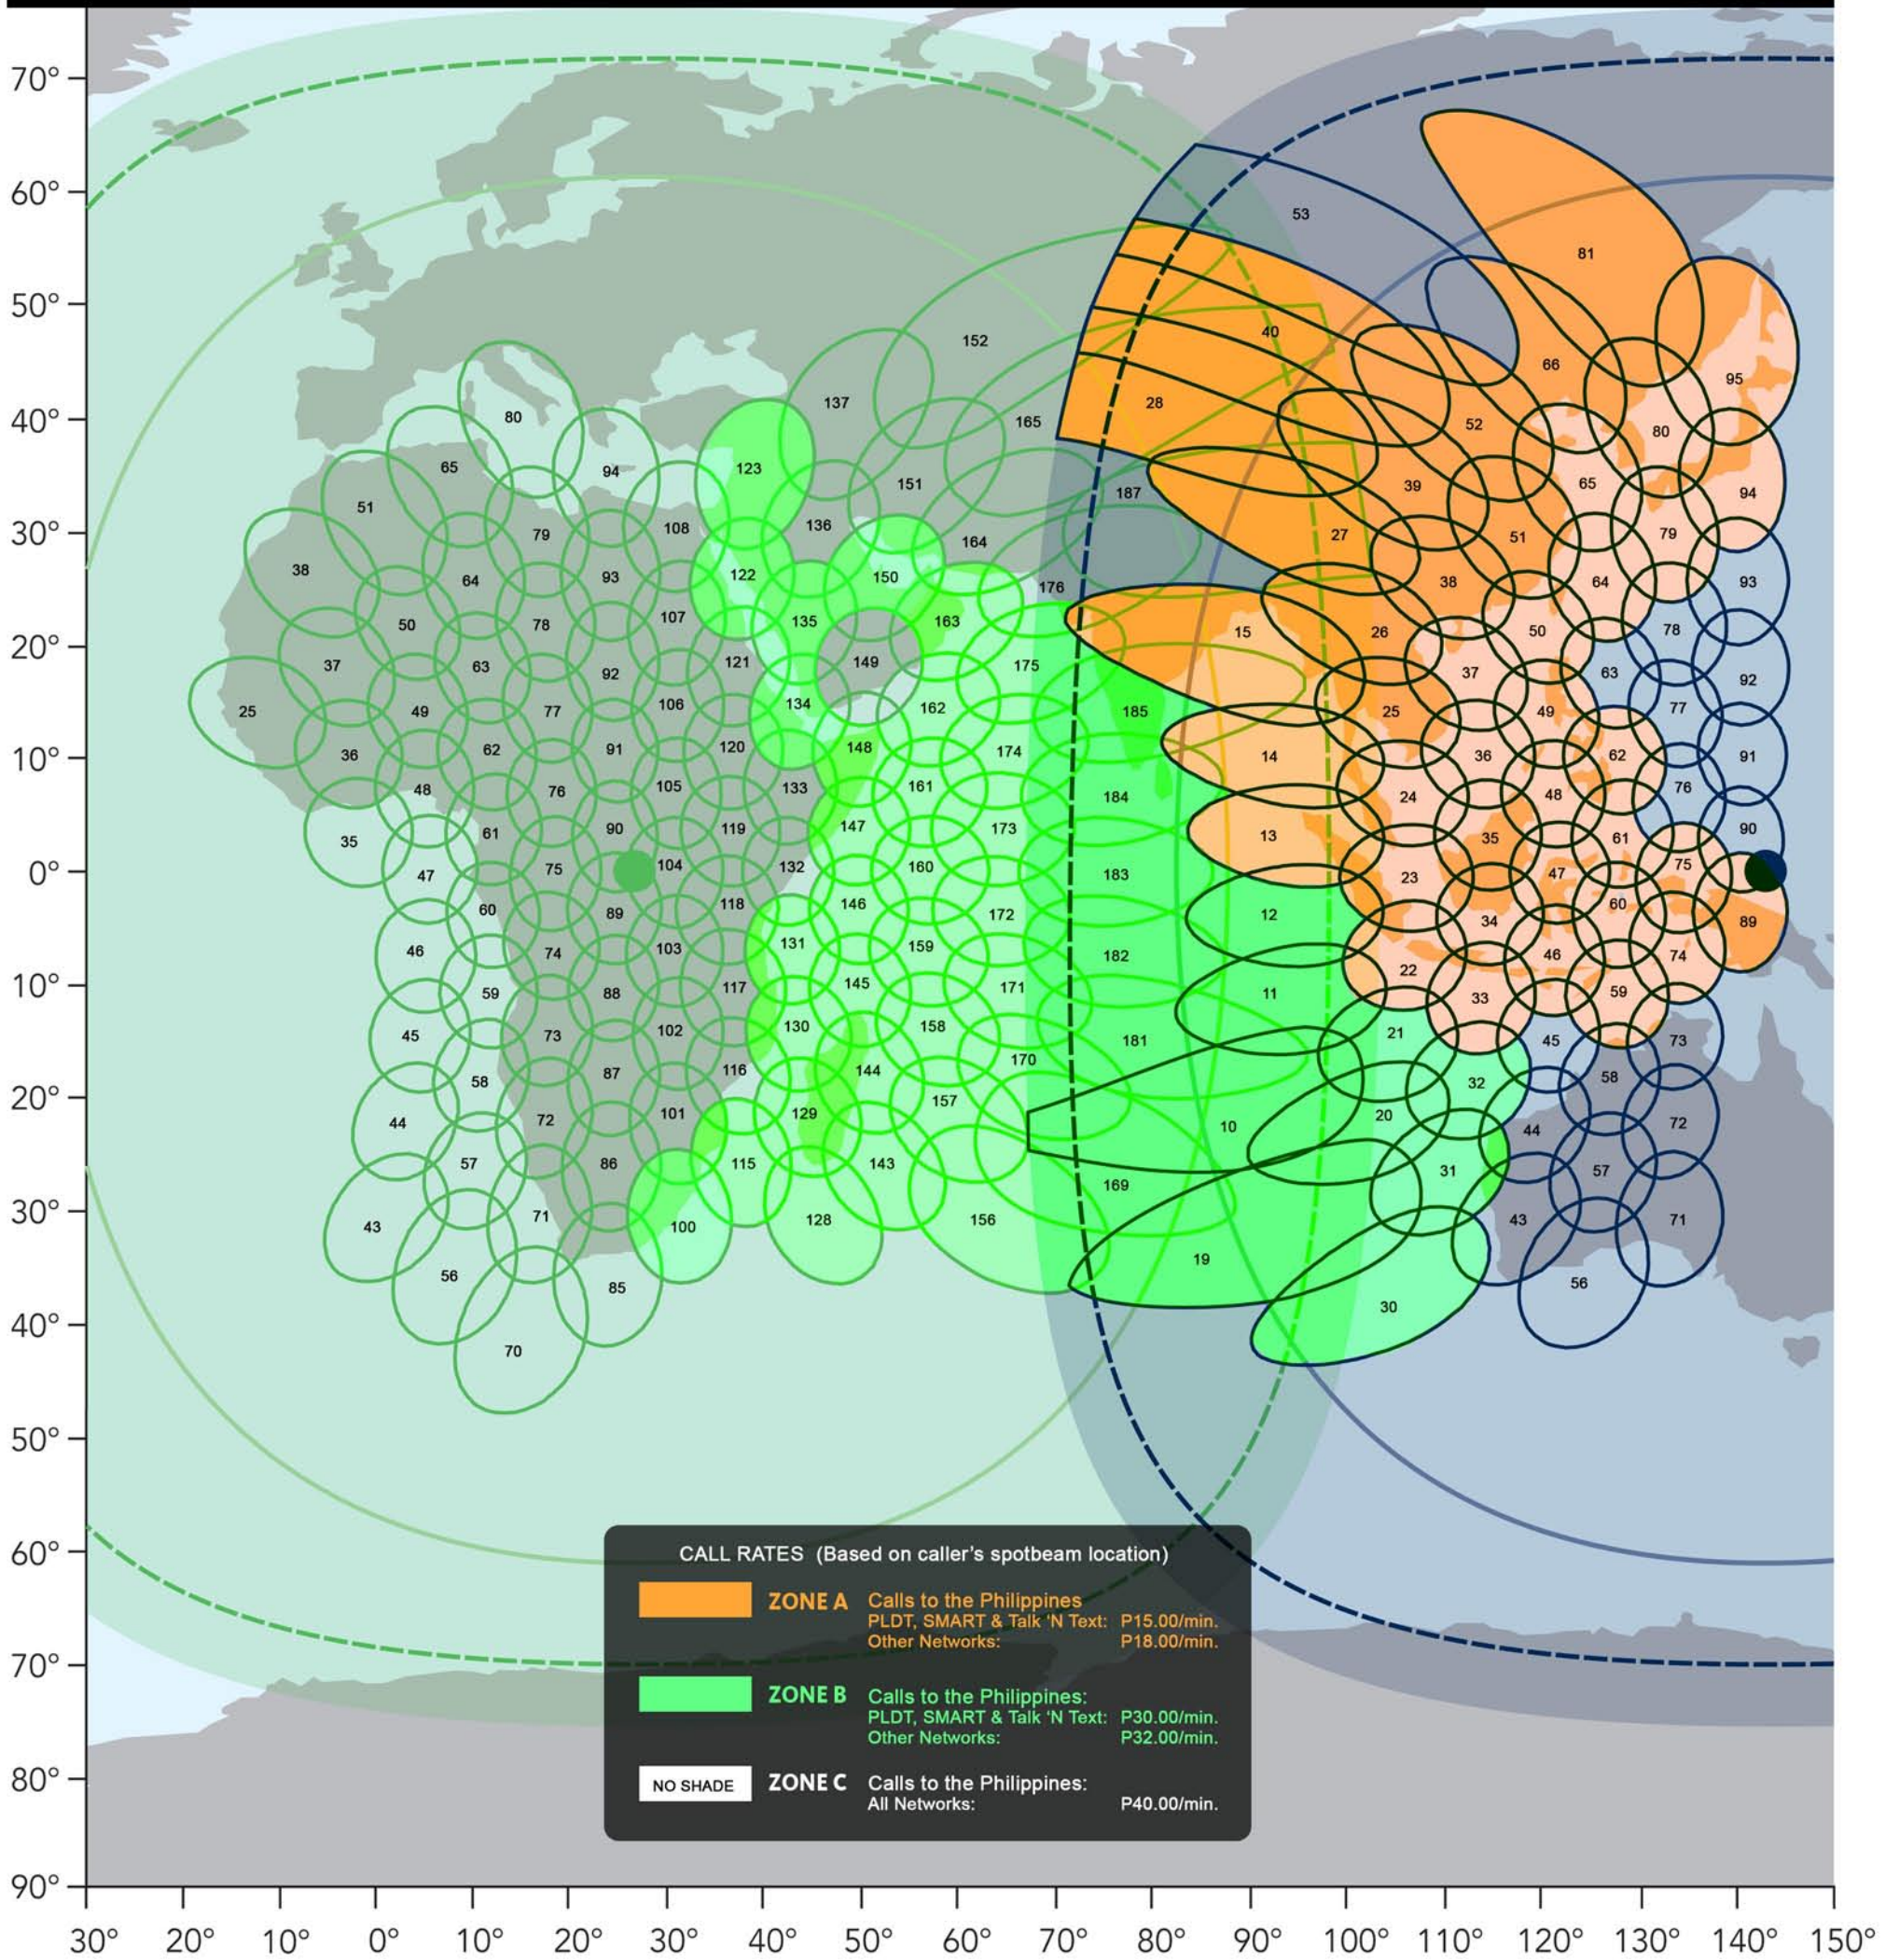

### HOW TO LOCK IN TO AN INMARSAT CHANNEL NUMBER

**1** Point antenna to the location of your desired INMARSAT I4 satellite



**F1 (Blue):**  
143.5°E

**F2 (Green):**  
25°E

Users of omni-directional antenna need not point to the direction of the satellites

**2** Insert your SIM into the SMART Link FR-190, FR-190G or Fleetphone unit's card slot. When LCD displays "Searching", lift the telephone handset and

**Press #52\***

**3** When LCD displays **Channel Number?** or **CH:**, enter a channel number followed by the # sign.

You may use any of these Inmarsat channel numbers: **38, 48, 49 or 88**

Example:  
To use channel number 38, press **38#**

**4** Replace handset back on hook and wait until LCD displays "SEARCHING" followed by "ACeS" or "Inmarsat" with a full black circle and signal bars.

You can try the other channel numbers until you get these signal indicators.

**5** Once you successfully lock in to a channel number, you may now place your call.

For calls to Philippine cellular numbers  
Dial 0 + Access Code + Mobile Number

For calls to Philippine Landline Numbers  
Dial 0 + Area Code + Telephone Number

For calls to Non-Philippine Numbers  
Dial 00 + Country Code + Area Code + Telephone Number